



Nymi Band 3.0 Strap Extenders

April 5, 2021

Version 1.0



TABLE OF CONTENTS

Revision History	2
Strap Extenders for Nymi Band™	3
Background	3
TUSITA Strap Extender	4
Instructions	5
Eosing Strap Extender	7
Instructions	8

Revision History

Date	Version	Revision History
April 5, 2021	1.0	Initial Release



Strap Extenders for Nymi Band

Background

The Nymi Band™ is a wrist-worn device that is designed to fit users with wrist diameters up to 210mm (8.25"), or approximately 99% of the population. For those users who find the Nymi Band too small to be comfortably worn, Nymi recommends the use of a Strap Extender as shown in the following sections. The Strap Extender will accommodate wrists up to 300mm (12") in diameter.

Nymi recommends two options for the Strap Extenders: the TUSITA Band Extender and the Eosing Band Extender. Both have been validated for user comfort and compliance with product requirements.

Additionally, some environments may forbid users from wearing the Nymi Band around their wrist to comply with safety requirements. In these instances, Nymi recommends using the Strap Extender to secure the band around the forearm or ankle.



TUSITA Strap Extender



Figure 1 - TUSITA Strap Extenders



Instructions:



Slide the end of the Strap Extender through the Strap Loop on the Nymi Band



Press Metal Peg through a slot or hole in the Strap Extender to secure Strap Extender to the Nymi Band



Slide the Sliding Loop on the Nymi Band over the end of the Strap Extender



Clasp the Hole Side of the Nymi Band to the Watch Clasp on the Strap Extender



Place Sliding Loop from the Strap Extender over the end of the Hole Side Strap of the Nymi Band to secure in place



Adjust the Watch Clasp on the Strap Extender to ensure fit is comfortable and secure



Eosing Strap Extender

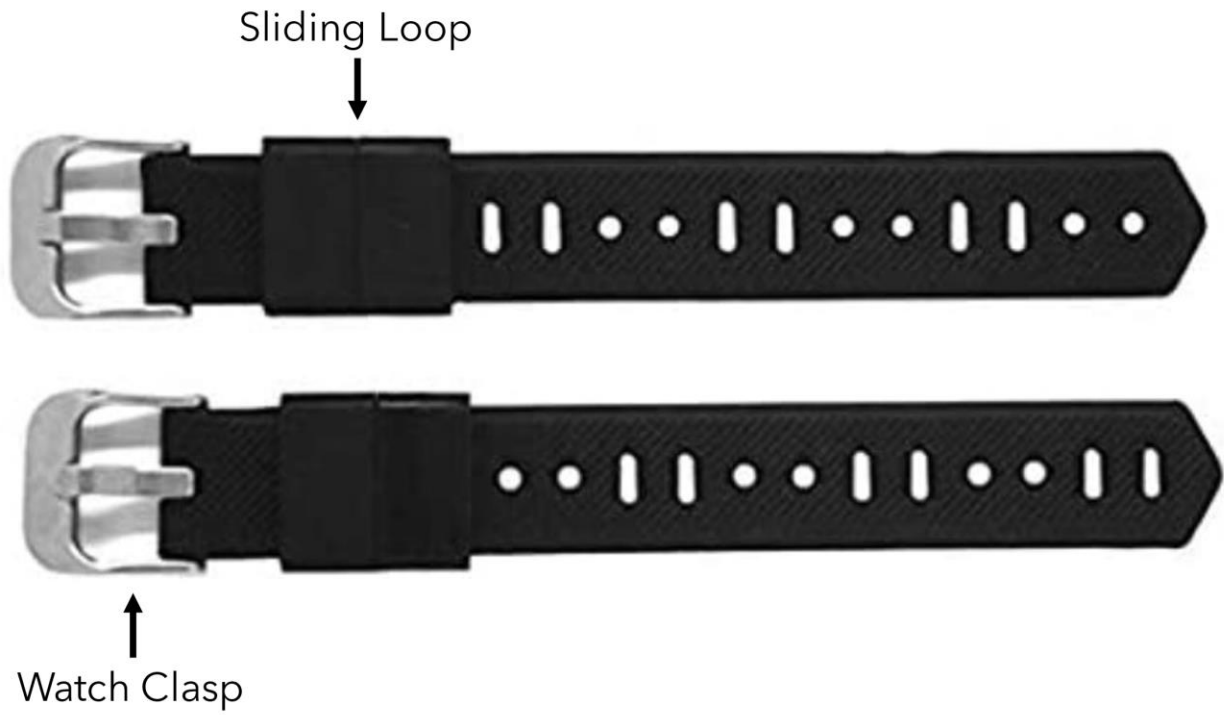


Figure 2 - Eosing Strap Extender



Instructions:




Slide the end of the Strap Extender through the Strap Loop on the Nymi Band



Press Metal Peg through a slot or hole in the Strap Extender to secure Strap Extender to the Nymi Band



Slide the Sliding Loop on the Nymi Band over the end of the Strap Extender

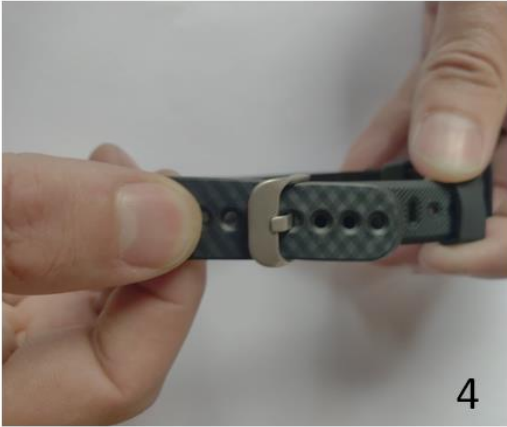

Clasp the Hole Side of the Nymi Band to the Watch Clasp on the Strap Extender



Place Sliding Loop from the Strap Extender over the end of the Hole Side Strap of the Nymi Band to secure in place



Adjust the Watch Clasp on the Strap Extender to ensure fit is comfortable and secure



Copyright © 2021
Nymi, Inc. All Rights Reserved.

Nymi, Inc. (Nymi) believes the information in this document is accurate as of its publication date. The information is subject to change without notice.

The information in this document is provided as-is and Nymi makes no representations or warranties of any kind. This document does not provide you with any legal rights to any intellectual property in any Nymi product. You may copy and use this document for your referential purposes.

This software or hardware is developed for general use in a variety of industries and Nymi assumes no liability as a result of their use or application. Nymi, Nymi Band, and other trademarks are the property of Nymi, Inc. Other trademarks may be the property of their respective owners.

Published in Canada.
Nymi, Inc.
Toronto, Ontario
www.nymi.com